

Doors



Care and Maintenance

General

Wipe the frame and sill of **PVCu doors**, periodically, with warm water and a mild detergent to remove any surface grime. Difficult stains may be removed using a gentle cream cleaner.

For **composite doors** maintenance is normally minimal but the surface should be periodically wiped with a soft cloth to remove any dirt.


For **timber or aluminium doors** please refer to the care instructions from your installer.

Glass should be cleaned using a branded glass cleaner.

Hinges

Should be lightly lubricated using a light non-acidic mineral oil (e.g. "3 in 1") twice per year and the surface cleaned with a soft, damp cloth.

The hinges should be periodically adjusted and the fixings tightened to ensure a satisfactory operation.

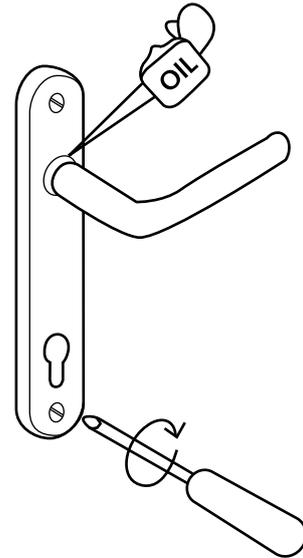


Handles

Please check and operate the door handle every three months, ensuring that the handles return to the horizontal position.

Handles should be lightly lubricated twice per year and cleaned with a soft, damp cloth to remove any dust or grime, taking care not to scratch the surface.

Check all fixings of the handle and tighten if necessary. Do not use any harsh or abrasive cleaners or aerosol sprays as this may affect the surface finish of the handle

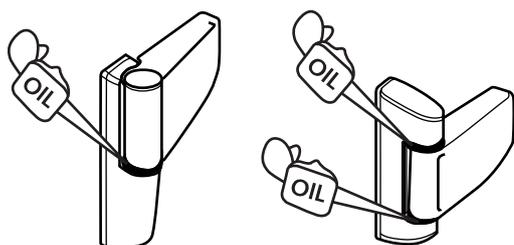

If you need any help with the operation or maintenance of your new window or door please contact your installer.


Doors



Care and Maintenance

Locks

All exposed moving parts should be lightly lubricated using a light non-acidic mineral oil (e.g. "3 in 1"), twice per year and the surface cleaned with a soft, damp cloth.

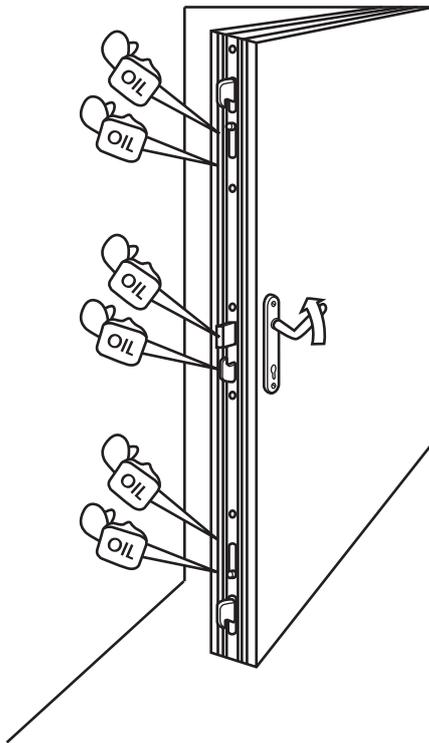

The door may need to be adjusted and fixings tightened to ensure a satisfactory operation.

For Stainless Steel Furniture

We recommend that all exposed stainless steel surfaces should be wiped over with a clean cloth and warm water with a mild detergent on a frequent and routine basis. Cleaning should always be immediately followed by rinsing with clean hot water and wiping completely dry with a towel.

For more stubborn dirt or stains use mild, non-scratching abrasive powders such as typical household cleaners. These can be used with warm water, bristle brushes, sponges or clean cloths.

For more aggressive cleaning a small amount of vinegar can be added to the powder.

Avoid using carbon steel brushes and steel wool should as they may leave particles embedded in the surface, which can lead to rusting.

To maintain your stainless steel product in it's best condition, clean once a month and more often in areas subject to heavy soiling or frequent use.

Letterplates, Knockers and Numerals

The surface should be cleaned twice a year and cleaned with a soft damp cloth to remove any dust or grime, taking care not to scratch the surface.